

\* Press and hold the **Down/Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **iSmart DV App** is compatible with smartphones and tablets listed below

### For Apple iOS

- \* iPhone5, 5s, 6 (Plus), & 6s (Plus) (iOS9)
- \* iPad Air & Mini (iOS9)

### For Android:

- \* Android 4X Quad-core devices



iOS / Android  
App Download

## COMPATIBILITY

\* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.



Correct disposal of this Product  
(Waste Electrical & Electronic Equipment (WEEE))  
Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

This symbol means that electrical and electronic equipment, at their end of-life should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/recycling center.



This product complies with European safety and electrical interference directives



This product does not contain environmentally hazardous materials (lead, mercury, cadmium, hexavalent chromium and brominated flammable agents: PBB and PBDE).

# myria

# Action Camera

Wi-Fi · Waterproof · Ultra HD



Wide Angle  
Lens



HDMI

 


Waterproof  
to 30m



1.5 Hours

## THE BASICS

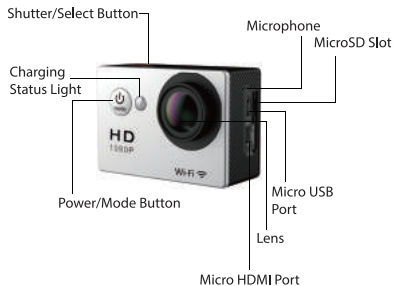

## WATERPROOF HOUSING



## ACCESSORIES



Waterproof Housing



Handle Bar/Pole Mount



Mount 1



Mount 2



Mount 3



Mount 4



Mount 5



Mount 6



Mount 7



Clip 1



Clip 2



Helmet Mounts



Bandages



Battery



Lens Cloth



Tethers



Protective Backdoor



 
USB Cable

 
 


Charger

## MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

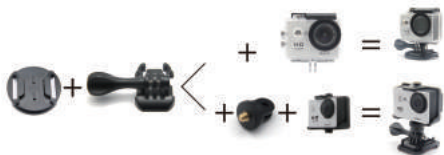

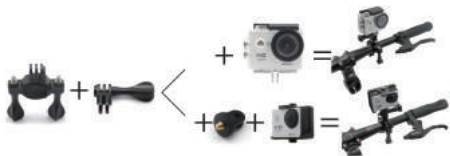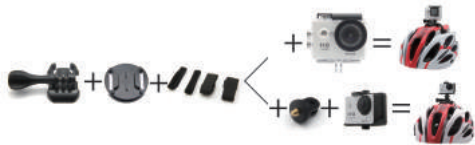

---

## GETTING STARTED

---

### HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

#### To power ON:

Press the **Power/Mode Button**.

#### To power OFF:

 
Press and hold the **Power/Mode Button**.

---

## OVERVIEW

---

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:



---

 Video Record Video

---

 Photo Capture a single photo.


---

 Burst Photo Capture photo bursts

---

 Time Lapse Shoot a series of photos at set time intervals

---

 Settings Adjust camera settings, resolution and more.

---

## SETTINGS

---



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

**Video Resolution:** 1080p30/720p60

MicroSD Card	1080p30	720p60
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins

**Looping Video:** Off/On

**Time Stamp:** Off/Date/Date & Time

**Exposure:** +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

**Photo Resolution:** 12M/8M/5M/2M

**Burst Photo:** 3 Photos

**Time Lapse:** 2s/3s/5s/10s/20s/30s/60s

**Continuous Lapse:** Off/On

**Power Frequency:** 50Hz/60Hz/Auto

**Language:** English/Traditional Chinese  
/Italian/Spanish/Portuguese/German/  
Dutch/France/Czech/Polish/Turkish/  
Russian/Japanese/Korean/Thai

**Date & Time:** MM/DD/YY, DD/MM/YY,  
or YY/MM/DD

**Sound Indicator:** Shutter On/Off, Start Up 1/2/3/  
None, Beep On/Off, Volume  
0/1/2/3

**Upside Down:** On/Off

**Screen Saver:** Off/1 min/3 min/5 min

**Power Saver:** Off/1 min/3 min/5 min

**Format:** No/Yes

**Reset:** No/Yes

**Version**

---

## VIDEO MODE

---

### Video

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

#### **To start recording:**

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

#### **To stop recording:**

Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

---

## PHOTO MODE

---

### Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

#### **To take a photo:**

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

---

## BURST PHOTO MODE

---

### Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

### To take a **Burst Photo series**:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

---

## TIME LAPSE MODE

---

### Time Lapse

To capture a **Time Lapse** series, verify the **Continuous Lapse** is **ON** and camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

### To take **Time Lapse**:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

---

## QUICK MODES

---



### To enter the **Quick Modes** menu

1. Verify the camera is in **Camera modes**.

2. Press and hold the **Shutter/Select Button** for three seconds.
3. Repeatedly press the **Power/Mode Button** to cycle through **camera modes**.
4. Press the **Shutter/Select Button**.
5. **To exit**, hold down the **Shutter/Select Button** for three seconds.

---

## PLAYBACK

---

### Playing Back Videos and Photos

#### To enter the **Playback** menu:

1. Verify the camera is in **Camera modes**.
2. Press the **Up/Playback Button** to enter the **Playback** menu.
3. Repeatedly press the **Power/Mode Button** to cycle through **Video** and **Photo**.
4. Press the **Shutter/Select Button** to select desired option.
5. Use **Up/Playback Button** or **Down/Wi-Fi Button** to cycle through the various options.
6. Press the **Shutter/Select Button**.
7. To return to the **Playback** menu, press the **Power/Mode Button**.

8. **To exit**, hold down the **Up/Playback Button** for two seconds.

---

## STORAGE/MICROSD CARDS

---

This camera is compatible with **8GB, 16GB, and 32GB** capacity **microSD, microSDHC, and microSDXC** memory cards. You must use a **microSD** card with a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

---

## BATTERY

---

### To charge the battery

Use the 1A USB charger and USB cable that come standard with your camera.

\*Third-party chargers and accessories may not be supported.

\* Charging Time: 5 hours

---

## CAMERA APP

---

### Connecting to the iSmart DV App

The **iSmart DV App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **iSmart DV App** to your smartphone or tablet at the **Google Play** or **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.
4. Press the **Down/Wi-Fi Button** to turn on **Wi-Fi\***.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**ICAM-Wg(R)**" followed by a series of numbers.
6. Enter the password "**1234567890**".
7. Open the **iSmart DV App** on your smartphone or tablet.