

Adresă IP și mapping porturi pe router

- 1. Setați adresa IP a DVR-ului, port TCP, port HTTP și port mobil
- (1) Setați adresă IP, port TCP și HTTP, vezi figura de mai jos:

Net Card	Win	e Netca	rd			DHCP	Enable	
IP Address	192	168		-T	•	10]	Adresă IP DVR
Subnet Mask	255	+ 255		255	•	0]	
Gateway	192	- 168		I.	•	1]	Adresă IP rout
Primary DNS	0	. 0		0	•	0]	
Secondary DNS	0	. 0	14	0	- 25	0]	
TCP Port	3450	57						
HTTP Port	80							
HS Download				-				
Transfer Policy	Qu	ality Pr	efe					
	-							

(2) Setați port Mobile Monitor, vezi figura de mai jos:

al Main Menu->	-System->NetService
Net Server PPPOE NTP E Mobile W Enable V F Port 345	Net Server Info O: O: NTP:10 Ionitor
	Set OK Cancel





2. Dacă este numai 1 DVR pe router, găsiți adresa IP a router-ului și accesați-o, mergeți la DMZ pentru a introduce adresa IP a DVR-ului, vezi figura de mai jos:

JUFENG-WRT - DMZ - Microsoft Internet Explorer	- 7 🛛
File Edit Mew Favorites Tools Help	2
🚱 Back - 🕑 - 🖹 🗟 🏠 🔎 Search 🤺 Favorites 🤣 🍰 🍓 🖼 🦓	
Address Addres	💌 🄁 🐼 🛛 Links 🍅
dd-wrt.com control panel	Firmware: DD-WRT v24 (05/24/08 up 13 min, load average: 0.13, 0.12, WAN: Dis:
Setup Wireless Services Security Access Restrictions NAT / QoS Administration	Status
Port Forwarding Port Range Forwarding Port Triggering LPhP DM2 QoS	
Demilitarized Zone (DM2)	Help more
DM2 Introduceți adresa IP a DVR- ului, apoi executați clic pe 10.6.40, 10 DM2 Host IP Address 10.6.40, 10	DM2: Enabling this option will expose the specified host to the Internet. All por will be accessible from the Internet.
Save Apply Settings Cancel Changes	
	<u> </u>
Ø Deres	>
start Jurence-wat - DMZ	Internet

3. Dacă sunt mai multe DVR-uri pe router, setați adresa IP și port mapping, așa cum se observă în imaginea următoare:





	JUFENG-WRT	- Port Forwarding - Mic	crosoft Internet Explorer			- 7 🛛
	File Edit View	Favoritas Tools Halp		M		
	3 Back - 🕤) - 🗷 🗟 🏠 🔎	🔿 Search 🤺 Favorites 🔌	3 🔗 😓	🖃 🚜	
	Address 🔊 http://1	10.6.40.1/apply.cgi		💌 🄁 😡 🛛 Links 🍟		
	dd-w	rt.com	Time : 06:33:28	Firmware: DD-WRT √24 (05/24/08 3:28 up 17 min, lead overage: 0.02, 0.09, WAN: Dist		
	Setup Wirel	ess Services Secu	arity Access Restriction	s NAT / QoS	Administration	Status
	Port Forwarding	Port Range Forwarding	Port Triggering UPnP	DMZ QoS		
	Port Forward		Adresă IP DVR			Help more
Port TCP	Forwards		†			Port Forward: Certain applications may require to
Port HTTP	Acplication	Port from Pro	stocol (P Address	Port to	Enable	open specific parts in order for it to Function correctly. Examples of these
			P Y 10.6.40.10	3456/		applications include servers and certa online games. When a request for a
Port Mobile Monito	or dvr-mobile	34599 TO	P V 10.6.40.10	34599		Certain port comes in from the Internet, the router will route the dat
						security concerns, you may want to
			Add Remove			you are using, and uncheck the <i>Enab</i> checkbox after you are finished.
		Save Appl	ly Settings Cance	d Changes		
	<		11			
	(É)					😨 Internet
	🦺 start	🚳 JUFENG-WRT - Port F.,				🤨 🐯 12:42 PM

După introducerea parametrilor de mai sus, executați clic pe "Save".

4. Vizualizare IE, CMS și mobil, de la distanță.

IE Browser:	<u>http://10.6.40.10:80</u>
CMS:	Adresă IP: 10.6.40.10
	Port: 34567
Mobil:	Server IP: 10.6.40.10
	Port: 34599

Pentru iPhone, vă rugăm să utilizați mobilul pentru a căuta "vMeye" în <u>www.appstore.com</u> și să instalați aplicația online.