








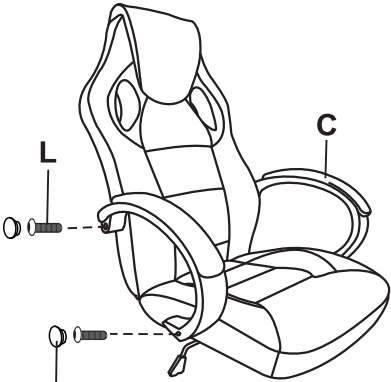
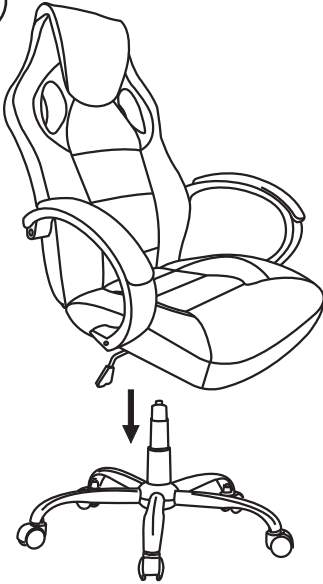

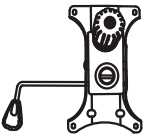

 



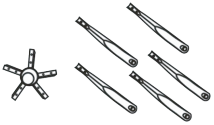



Instrucțiuni de asamblare
Assembly instructions
 MG7403

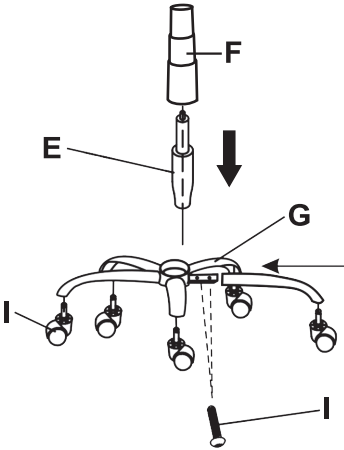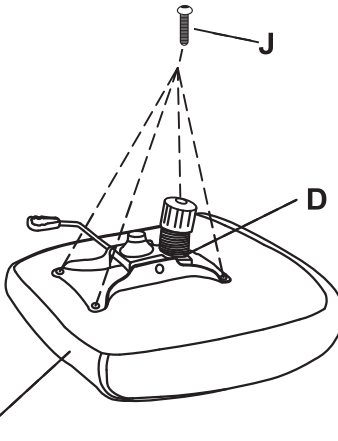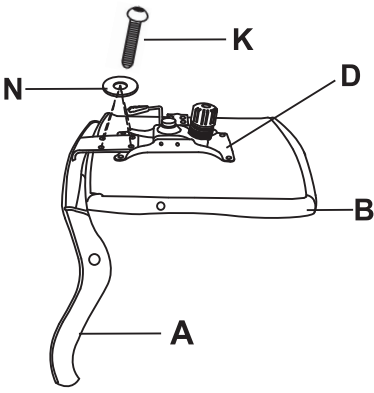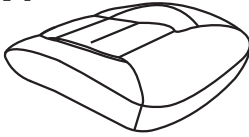

Ax1 	Hx5 		1 	2 	3 
Bx1 	Ix10  M6x10mm				
Cx2 	Jx4  M6x20mm		4 	5 	6 
Dx1 	Kx4  M6x30mm				
Ex1 	Lx4  M8x40mm				
Fx1 	Mx4 				
Gx1 	Nx4 	Ox1 